

## ACTIO 40



The electronic meters provide pulse output proportional to the energy measured. **ACTIO 40** is a centralized energy meter with four inputs (optocoupled) for reading these pulses. Their values are then stored on the memory.

**ACTIO 40** boasts a total of four digital inputs associated to 4 memory registers. Each register has 32 bits (4 bytes), thus boasting up to a maximum of FFFF FFFF hexadecimal, this mean a total of 4,294,967,295 pulses. When this figure is reached, the internal memory register reset on the next pulse and metering starts again.

The minimum duration of the pulse or the change of status must be 50 ms and the minimum time between the successive pulse on the same input must be 50 ms. This represents a maximum sample frequency of 10 Hz.

**ACTIO 40** has a total of 4-relay type outputs, these outputs are governed by the master which can activate or deactivate them as required by the application. The appliance boasts a write function; it is able to provide an activation or deactivation pulse at any output. The duration of the pulse is variable and is programmed on the equipment; the minimum value is 20 ms and the maximum 5.1 seconds (5100 ms = 255x20), 255 = FF in hexadecimal and 20 is the minimum value in milliseconds.

### TECHNICAL CHARACTERISTICS


|  |   |
|--|---|
| <b>Power circuit</b>                           |   |
| Input voltage                                  | 85 ... 265 V a.c. / 120 ... 374 V d.c.  |
| Frequency                                      | 47 ... 63 Hz  |
| Maximum consumption                            | 4,6 V·A a.c. / 2,5 V·A d.c  |
| <b>Environmental conditions</b>                |   |
| Temperature range                              | -10°C ... +50°C   |
| Humidity range                                 | 5% ... 95%  |
| <b>Mechanical characteristics</b>              |   |
| Enclosure material                             | Plastic UL94-V0 Self-extinguishing  |
| Protection grade                               | IP 20   |
| Unit dimensions (Width x Height x Length)      | 93 x 71 x 58 mm   |
| Weight   | 170 g   |
| Mounting                                       | DIN rail  |
| Maximum working altitude                       | 2000 m  |
| <b>Serial interface</b>                        |   |
| Type   | RS-485 three wires  |
| Baud rate                                      | 9600 / 19200 bps configurable   |
| Data bits                                      | 8   |
| Parity   | Without parity  |
| Stop bits                                      | 1   |
| <b>Characteristics and electrical security</b> |   |
| Security                                       | CAT III 300 V under EN 61010  |
| Electric shock protection                      | Double insulation class II  |
| <b>Digital inputs characteristics</b>          |   |
| Type   | Opto-insulated voltage free (dry contact)   |
| Maximum activation current                     | 50 mA   |
| <b>Digital outputs characteristics</b>         |   |
| Type   | Relay   |
| Nominal voltage                                | 250 Vac   |
| Electrical endurance                           | 3·10 <sup>4</sup> operations  |
| Nominal current                                |   |
| With resistive load                            | 250 Vac / 5 A ac  |
| With inductive load (A.C.)                     | 250 Vac / 2 A ac  |
| With inductive load (D.C.)                     | 24 V dc / 5 A dc  |
| <b>Standards</b>                               |   |
| Standards                                      | IEC 60664, VDE 0110, UL 94, EN-61010-1, EN 55011, EN 61000-4-3, EN 61000-4-11, EN 61000-6-4, EN 61000-4-2, EN 61000-6-2, EN 61000-6-1, EN 61000-6-3, EN 61000-4-5 -CE |

## INSTALLATION

The unit is installed on a DIN rail and all connections remain inside the electric panel.

The unit must be connected to a power supply circuit protected with fuses of the gI (IEC 269) or M type, between 0.5 and 2 A. Likewise, the unit must have a built-in circuit breaker or equivalent device to disconnect the unit from the power supply network. The power supply circuit will be connected with a cable that has a minimum section of 2,5mm<sup>2</sup>.


## CONNECTIONS AND LEDS

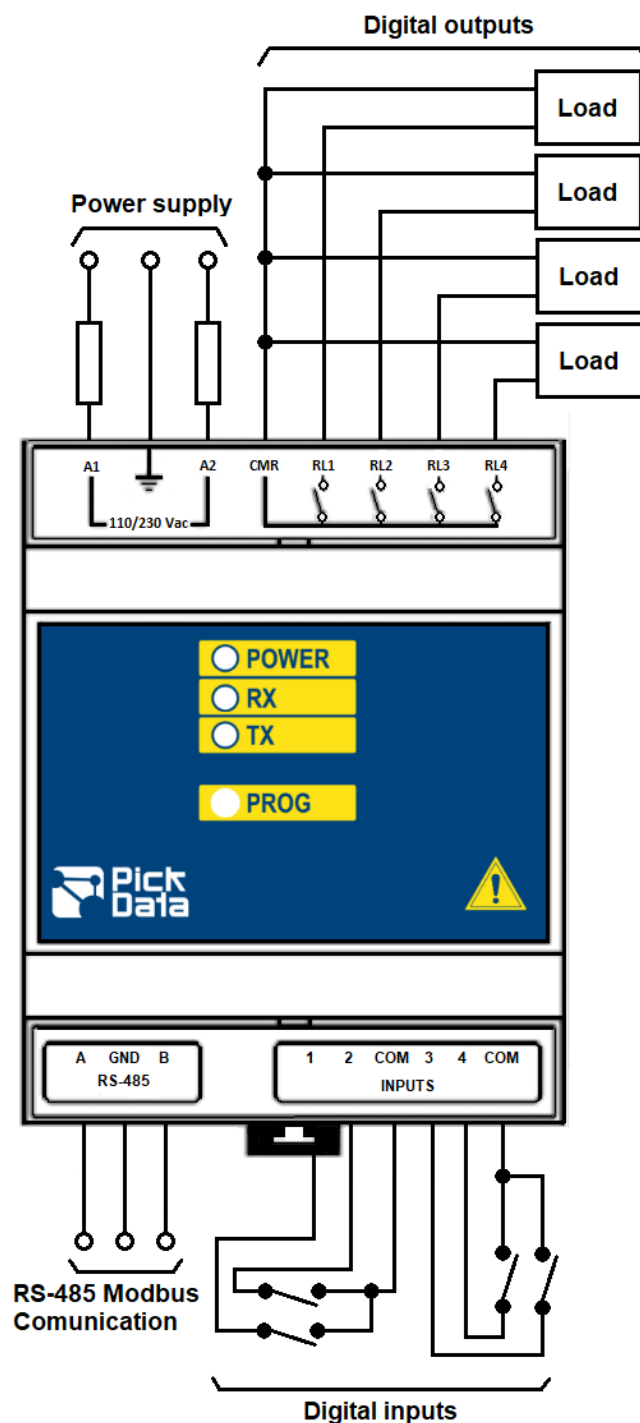

## LEDS

| Led | Description  |
|-----|--|
| 1   | <b>Power</b><br>- Activity when device powered on        |
| 2   | <b>RX</b><br>- Blinking while receiving data from RS-485 |
| 3   | <b>TX</b><br>- Blinking while sending data by RS-485     |

## DIMENSIONS

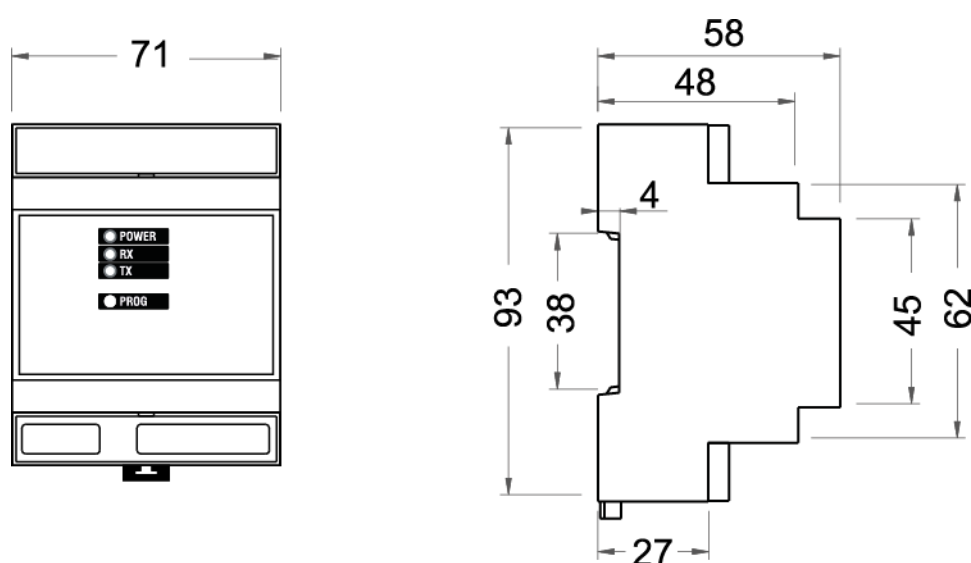

## COMMUNICATION

An RS-485 communication port is available, for the read/write of the 4 meters of the **ACTIO 40** thanks to a management application. For this purpose, the MODBUS RTU © communication protocol is used.

Functions are available for reading and zero resetting of the different meters, reading and writing of the relay activation time or for the permanent activation and deactivation of the relay itself, to change the communication speed parameters and the slave address of the equipment.

The equipment, by default, **comes with the address 98** (62 in hexadecimal). The appliance communication speed by default is **19200, 8, N, 1**.

This speed can be changed using a MODBUS RTU ©, **command at a speed of 9600, 8, N, 1**, with the same command it can vary the speed as required by the installation.


## MODBUS RTU COMMANDS

| Magnitude   | Input Registers | Unit  | Function   |
|---|-----------------|---|------------|
| Peripheral number   | 0x3000          |   | 4,16(0x10) |
| Baud rate   | 0x3001          | 1: 9600 bps<br>2: 19200 bps   | 4,16(0x10) |
| Device version  | 0x3500-0x3502   | Format: "V1.10" values in ASCII and last by always 0  | 4          |
| Serial number   | 0x3503-0x3504   |   | 4          |
| Meter value 1   | 0x0000-0x0001   |   | 4          |
| Meter value 2   | 0x0002-0x0003   |   | 4          |
| Meter value 3   | 0x0004-0x0005   |   | 4          |
| Meter value 4   | 0x0006-0x0007   |   | 4          |
| Digital input state<br>Activated = Closed (1)<br>Deactivated = Opened (0)<br>Minimum 0 Maximum F            | 0x2000          | 0000: deactivated inputs<br>0001: Input 1 activated<br>0003: Input 1&2 activated<br>Bin 0001: LSB E1<br>Bin 1000: MSB E4    | 4          |
| Digital output control<br>Activated = Closed (1)<br>Deactivated = Opened (0)<br>Minimum 0 Maximum F         | 0x1000          | 0000: deactivated outputs<br>0001: Output 1 activated<br>0003: Output 1&2 activated<br>Bin 0001: LSB E1<br>Bin 1000: MSB E4 | 4,16(0x10) |
| Impulse digital output control<br>Activated = Closed (1)<br>Deactivated = Opened (0)<br>Minimum 0 Maximum F | 0x1500          | 0000: deactivated pulses<br>0001: Output impulse 1<br>0003: Output impulse 1&2<br>Bin 0001: LSB E1<br>Bin 1000: MSB E4      | 4,16(0x10) |
| Impulse duration<br>(Byte Bajo - Relay 1 / Byte Alto - Relay 2)   | 0x2500          | 01: Duration 20 ms<br>FF: Duration 5100 ms  | 4,16(0x10) |

## MODEL REFERENCE

| Model    | Reference | Protocol   | Communication |
|----------|-----------|------------|---------------|
| ACTIO 40 | C010      | Modbus/RTU | RS-485        |

## SAFETY PRECAUTIONS

|   |   |
|---|---|
|  | <p><b>DANGER</b></p> <p>Warns of a risk, which could result in personal injury or material damage caused by an incorrect handling or installation of the unit. In particular, handling with voltages applied may result in electric shock, which may cause death or serious injury to personnel. Defective installation or maintenance may also lead to the risk of fire. Read the manual carefully prior to connecting the unit. Follow all installation and maintenance instructions throughout the unit's working life. Pay special attention to the installation standards of the National Electrical Code.</p> |
|---|---|

## DISCLAIMER

PickData, SL reserves the right to make modifications to the device or the unit specifications set out in this instruction manual without prior notice.

PickData, SL on its web site, supplies its customers with the latest versions of the device specifications and the most updated manuals.

## ***MAINTENANCE AND TECHNICAL SERVICE***

Device doesn't require maintenance.

In the case of any query in relation to unit operation or malfunction, please contact the PickData, SL technical support service.

**PickData, SL – Technical support service**

Calle Innovació, 3

08232 – Viladecavalls (Barcelona), SPAIN

Tel: (34) 935 117 505 (España)

Email: [sat@pickdata.net](mailto:sat@pickdata.net)